


MOD: Pantalón largo vestir



MEDIDAS DE CONTROL DE PRENDAS TERMINADA

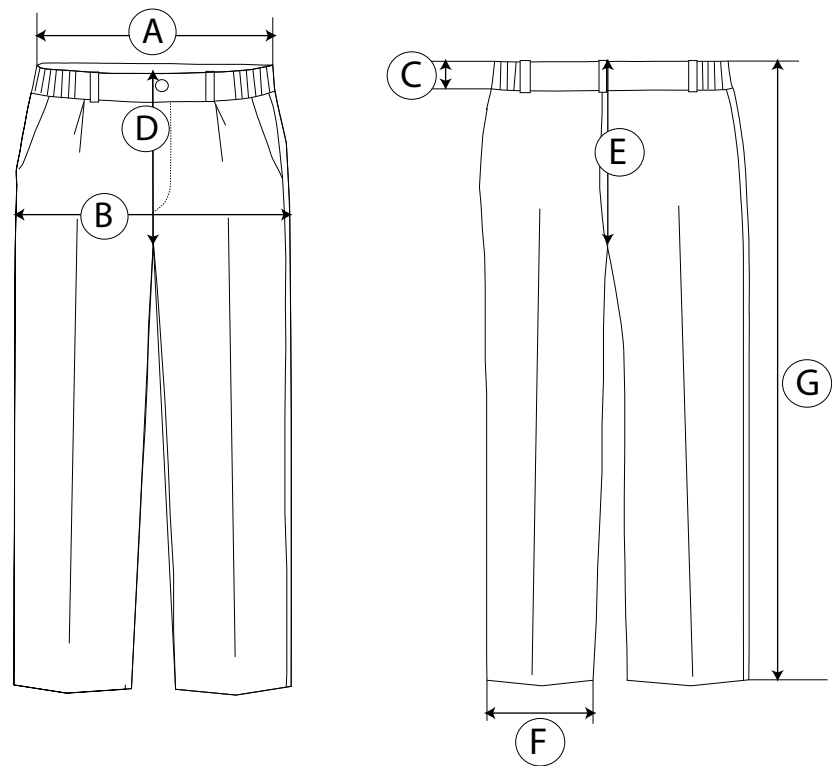

MEDIDAS(mm)	ref.	t0	t1	t2	t4	t6	t8	t10	t12	t14	t16	t18	t20	t22	t24
Cintura goma tensor	A	180	190	200	210	220	340	380	400	420	440	460	480	490	500
Cadera	B	260	290	320	350	390	410	440	470	500	530	560	590	620	650
Ancho cinturilla	C	35	35	35	35	35	35	35	35	35	35	35	35	35	35
Caja delantero	D	170	180	190	200	210	220	230	240	250	260	270	280	290	300
Caja trasero	E	220	230	245	270	280	280	310	320	340	360	380	400	420	440
Bajo 1/2	F	120	120	130	140	150	160	170	180	190	200	210	220	220	230
Largo por costado	G	550	590	630	670	730	820	880	950	1040	1130	1160	1170	1180	1190

OBSERVACIONES: Las tallas 0-1-2-4-6 son todo goma funcida
Medición manual pude haber error de 1 a 3 cm.